

User guide for Yealink T41P

 


General index

1.General notes.....	3
2.Speakerphone.....	3
2.1 Activating the speakerphone during a selection.....	3
2.2 Activating the speakerphone during a selection.....	3
3.Hold (Hold function).....	4
4.Deactivating the microphone (Mute function).....	4
5.Call transfer.....	4
5.1 Blind transfer.....	4
5.2 Transferring with call waiting.....	5
6.Conference calls (max 3 people).....	5
7.Call waiting.....	5
7.1 Accepting call waiting.....	6
7.2 Declining call waiting.....	6
8.Static deviation.....	6
8.1 Enabling static deviation.....	6
8.2 Disabling static deviation.....	6
9.Call list.....	7
9.1 Missed calls.....	7
9.2 Incoming outgoing calls.....	7
10.Returning a call.....	7
11.Addressbook management.....	8
11.1 Entering a contact.....	8
11.2 Finding a contact.....	8
11.3 Editing a contact.....	8
11.4 Deleting a contact.....	9

1. General notes

In this guide, number 9 defines the soft keys as shown in the figure below:

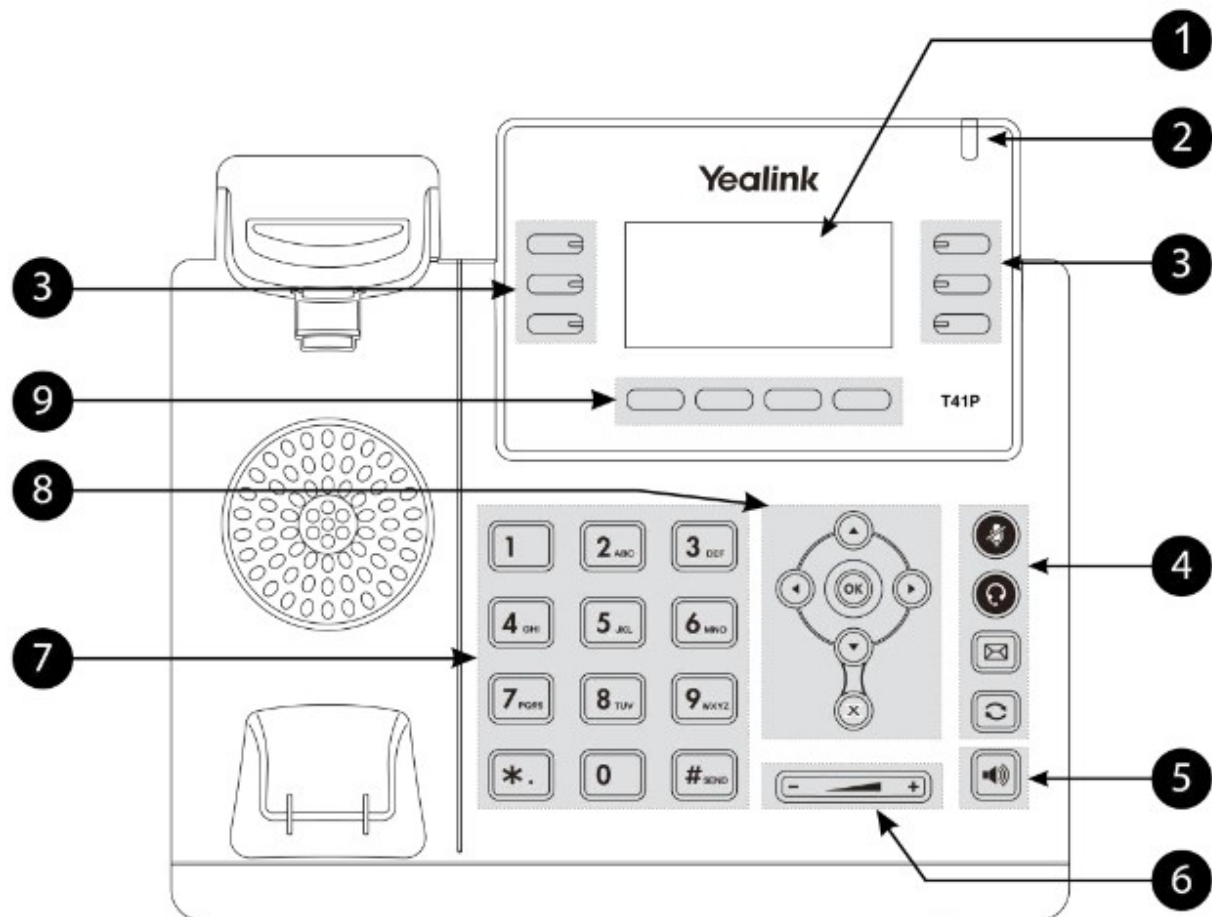


These keys allow access to different functions depending on the writing that appears on the screen of the phone near each key.


2. Speakerphone

2.1 Activating the speakerphone during a selection

Enter the phone number

Press the  key to start the call on speakerphone.

2.2 Switching to speakerphone during a call



Press the  key to activate/deactivate the speakerphone during a conversation.

Please note: if you place the handset back on its base during a conversation while on speakerphone, this will not end the call and you need to deactivate the speakerphone before hanging up.



3. Hold (Hold function)


To place a call on hold during a conversation press the **Hold** soft key which will deactivate the microphone of the phone. The other party hears a “hold melody”.

If you have one single call on hold, to resume the conversation and reactivate the microphone of the phone, just press the **Resume** soft key again. If multiple calls are on hold, you must first select the call on hold using

the  ,  directional up/down key and then press the **Resume** soft key.

4. Deactivating the microphone (Mute function)

To deactivate the microphone during a conversation or a conference call, press the  . key. The display will show the  icon.

To reactivate the microphone of the phone, press the  key again.

5. Call transfer

There are two ways to transfer a call: *blind transfer* where the number to transfer the call cannot decide whether or not to accept the call transfer or the *hold call transfer*, where this option is available.

5.1 Blind transfer

During a conversation press the **Transfer** soft key to place the incoming call on hold. At this point you will hear a dial tone. Press the **Transfer** soft key again and enter the number of the person you want to transfer the call to. The call will be transferred and you will be disconnected from the call previously placed on hold.

5.2 Transferring with call waiting

During a conversation press the **Transfer** key to place the incoming call on hold. At this point you will hear a dial tone and you can enter the number of the person you want to transfer to the call to. Wait a short moment without pressing any keys until the call is placed. As soon as the called party answers, you can decide whether to transfer the call or not.

- To transfer the call, simply press the **Transfer** key or hang up
- In case the call transfer is refused, you can resume the call previously placed on hold earlier by first pressing the **Cancel** soft key and then the **Resume** soft key

6. Conference calls (max 3 people)





During a conversation press the **Conf** soft key to place the incoming call on hold.



At this point you will hear a dial tone and you can enter the number of the person to add to the conference call.



Press the **Submit** soft key or wait for the call to connect. As soon as the called party answers, you can add it to the conference by pressing again the **Conf** soft key. To end the conference call, simply hang up the receiver thereby ending the call with both parties.

7. Call waiting

Requirement: Call waiting must be activated as a feature on your phone. To enable/disable call waiting,

press the **Menu** soft key, select **Functions** using the  ,  left/right and the  ,  up/down

directional key and confirm with the **Next** soft key. Then select the 2nd call using the  ,  up/down

arrow key and confirm with the **Next** soft key. Using the directional  ,  left/right key on the 2nd call, you can enable/disable the function. Confirm your selection by pressing the **Save** soft key.

If a call is received during another call, the display will show the name or number and you will hear a “beep” at regular intervals. At this point you can decide whether or not to accept the new call or place the previous one on hold.

7.1 Accepting call waiting

Press the **Answer** soft key, at this point the first call is placed on hold and you are connected with the second one.

You can switch between calls using the **swap** soft key.

To end the current conversation, simply press the **cancel** soft key. To return to the previous call on hold, simply press the **Resume** soft key.












7.2 Declining call waiting

Press the Decline soft key. The caller will hear a busy signal.








8.Static deviation

Static deviation is defined as the deviation of an incoming call always on another number.

8.1 Enabling static deviation

To enable unconditional call forwarding press the **Menu** soft key, then select **Functions** using the  , 
left/right and the  ,  up/down directional key and confirm with the **Next** soft key. Then select **call**
Forwarding using the  ,  e confermarla con il softkey Avanti. Con i tasti direzionali  , 
up/down directional key and confirm with the **Next** soft key. With the directional  ,  left/right
directional key and scroll to **Active**. Enter the phone number to forward the call with **Forward** and confirm
your selection by pressing the **save** soft key. The display will show the  symbol.

8.2 Disabling static deviation

To deactivate unconditional call forwarding press the **Menu** soft key, then select **Functions** using the ,
 left/right and the  ,  up/down arrow key and confirm with the **Next** soft key. Then select **call**
Forwarding using the  ,  up/down arrow key and confirm with the **Next** soft key. With the ,



up/down arrow key select **Always Forward** and confirm with the **Next** soft key. To disable call




forwarding select **Always Forward** using the left/right arrow key and scroll to **Disabled** and confirm your selection by pressing the **save** soft key.

 
9.Call list

The phone list will memorize all missed, received and dialed calls.

9.1 Missed calls

If there are any missed calls not yet viewed, the display will show the  symbol indicating the number of missed calls. By pressing the **view** soft key you can review all the missed calls. Each call, even from the same number, will be reported several times.

9.2 Incoming outgoing calls



To view the list of received and placed calls press the **Reg.ch** soft key. Using the left/right directional key you can limit the list to only those calls made or received. The placed calls will show up on the



display with the symbol, while the received calls will show up with the symbol. Also in this case, each received or placed call, even if from the same number, will be reported several times.

10.Returning a call



You can call back a missed, received or dialed number by pressing the **Reg.ch** soft key and, after selecting the name or number to be called, simply press the **call** soft key to initiate the call to that number. You can





review the details of any calls such as the duration, by selecting the desired call with the up/down directional key and by pressing the **option** soft key. By pressing the **OK** soft key on **Detail**, you can review all the information of the selected call. By pressing the **call** soft key you can directly start the call to that number.

11.Addressbook management

11.1 Entering a contact



Press the **Directory** soft key using the  ,  up/down arrow key and scroll to **All Contacts** (default group) and confirm by pressing the **Next** soft key.

Press the **Add** soft key and enter the desired information such as: First and Last name and number, work and

mobile number, using the  ,  up/down directional key to scroll through the items to be completed and the soft key **123** , **abc** , **ABC** , **Abc**, or **2aB** to switch between numeric and alphanumeric. You can use the directional key to assign the new contact to a specific line account by changing **Account**.

Press the **save** soft key to save the contact in the address book or **Back** to delete the changes previously made.

11.2 Finding a contact



Press the **Directory** soft key using the  ,  up/down directional key and scroll to **All Contacts** (default group) and confirm by pressing the **Next** soft key.



Enter a few characters of the contact's name and wait a few seconds to start the search.



Please Note: it is recommended to enter more than one character as the search provides all the names that contain a sequence of characters.

Select the contact to be called using the  ,  up/down directional key and press the **call** soft key to start the call.

11.3 Editing a contact

Press the **Directory** soft key using the  ,  up/down directional key and scroll to **All Contacts** (default group) and confirm by pressing the **Next** soft key.



With the  ,  up/down directional key select the contact to be deleted (possibly making the search as previously described).



Press the **option** soft key, select **Delete** using the  ,  up/down directional key and confirm by



pressing the **OK** soft key.

Confirm the deletion of the contact by pressing the **OK** soft key.

11.4 Deleting a contact

Press the **Directory** soft key using the  ,  up/down directional key and scroll to **All Contacts** (default group) and confirm by pressing the **Next** soft key.

With the  ,  up/down directional key select the contact to be deleted (possibly making the search as previously described).

Press the **Option** soft key, select **Delete** using the  ,  up/down directional key and confirm by pressing the **OK** soft key.

Confirm the deletion of the contact by pressing the **OK** soft key.